

# SHS-P718

## USER MANUAL

### Samsung SDS Digital Door Lock

#### Convenient Opening

Easy push/pull handle access

**Welcome Function**  
When a user gets close to the door lock, the authorization standby mode will automatically activate.

#### Silent-Mode Function

When going in or out, the sound of the key entering and door opening will be suspended.

#### Automatic Card Reading Function

When a card touches the reader, the reader will conveniently recognize the card.

#### Double Authorization

Requires fingerprint & password combination to open

#### Security Assurance Function


When someone is inside the house, authorization from entry from the outside will be prohibited.

#### Built-in Fire Detection

Generates alarm in case of a fire

#### Security Function

Prevents intrusion from the outside

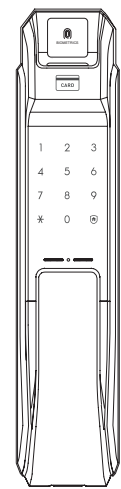

www.samsungsds-nss.com/en

GC68-02025A ED:05

## Safety Cautions


**Warning** This section contains important information to ensure the user's safety and prevent potential damage to property. Please, read this section carefully and use the product accordingly.

- The user shall not install or repair the product without authorization.
- Do not install the product in the place where the gap between the door and the frame is 5mm or more.
- Make sure that no unauthorized person has the access to the password.
- Do not operate the product with wet hands, and keep liquids such as water or drinks away from the product, or the product may malfunction or be damaged.
- Do not use the excessive force or sharp objects to push the lock buttons, as this can damage the product.
- Make sure that the door is completely closed when going outside. The manufacturer does not assume the responsibility for any harm caused by engagement of the lock on an improperly closed door.
- Please do not hang on the product or pull it.
- Be sure to correctly match the poles (+/-) when installing the batteries. Install the batteries with the correct poles (+/-).
- Replace all batteries immediately after they run out of power, and never mix new batteries with used ones.
- Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
- Replace the batteries within 1 week after the battery replacement alarm sounds.

※ In order to safely use the product, please read "Safety Precautions".  
※ The features of this product and the contents of the user guide may be changed without notice for quality improvement.


## Product Components

The product components used may vary depending on the installation environment.

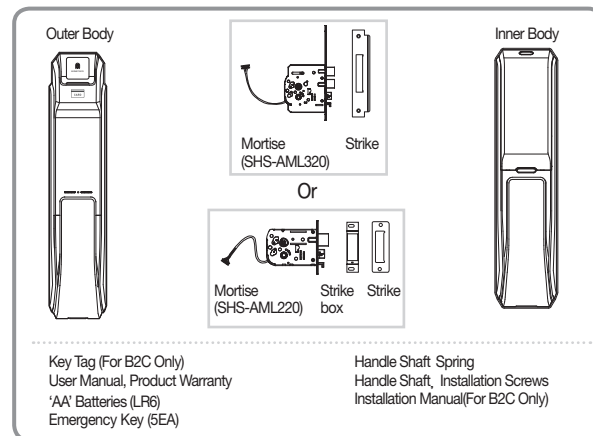


- Key Tag (For B2C Only)
- User Manual, Product Warranty
- 'AA' Batteries (LR6)
- Emergency Key (SEA)
- Handle Shaft, Spring
- Handle Shaft, Installation Screws
- Installation Manual (For B2C Only)


## Outer Body Parts

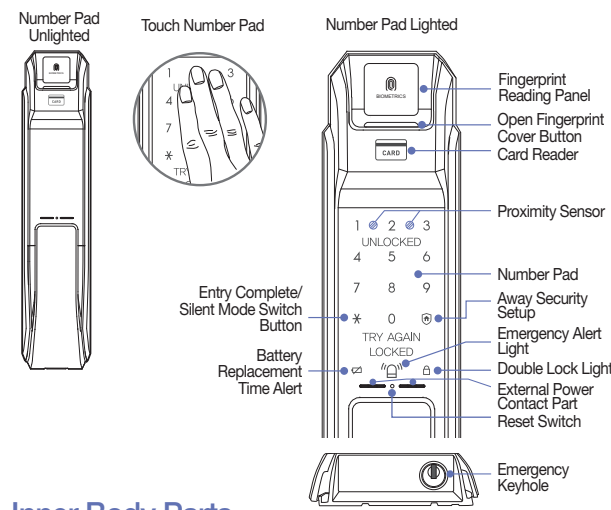

## Inner Body Parts

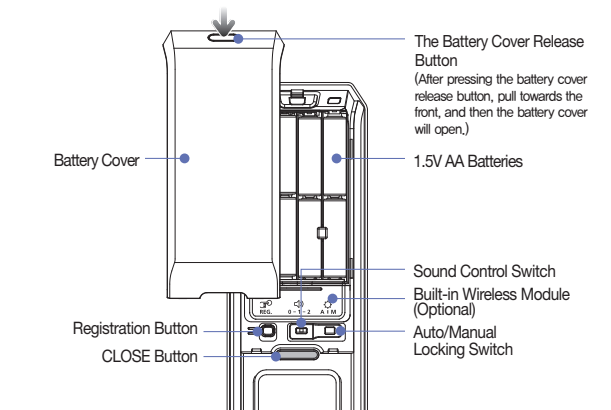

## Mortise

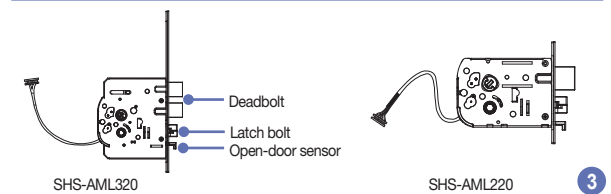

**Warning** Manage your password with care so that unauthorized people will not have access to it. Regularly changing your password can reduce the risk of it being leaked.

## Fingerprint, Card and Key Tag Registration

You can register and use up to 100 fingerprints. Up to 30 cards, including the key tag and user password, can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Password (from the outside)



Open the battery cover of the inner body and briefly press the [Register] button.

Enter the current password ("1234" after initialization) when the number pad is lit, and press the [\*] button.

### [Fingerprint Registration]

 
- Reading the Fingerprint to Be Registered
- Exiting Fingerprint Registration Mode



When LED light on the Fingerprint Reading Panel is on, touch the panel with the fingerprint to be registered. When a "ding" sound is heard and LED light goes off, then remove the finger. (Must do it 3 times)

To end the registration, please press the [Registration] button on the inner body.


- Registration Confirmation



Press the [Open Fingerprint Cover] button on the outer body to open the lid of the Fingerprint Reading Panel and touch the panel with the registered fingerprint.

### [Card and Key Tag Registration Without ID number]

- Placing the Card or Key Tag on the Card Reader (from the outside)
- Confirming Card or Key Tag Registration (from the outside)

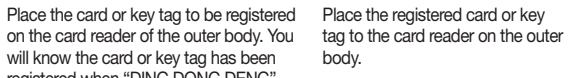

Place the card or key tag to be registered on the card reader of the outer body. You will know the card or key tag has been registered when "DING DONG DENG" sounds.


Place the registered card or key tag to the card reader on the outer body.

To register multiple cards or key tags, lightly place another card or key tag to the card reader within 20 seconds after registering the previous card or key tag.

※ ID number is given automatically in order of the registration.

### [Card and user password registration with ID number]

 
- Enter 2 digits ID number
- Enter new user password



Input ID between 01 and 30, and press [\*].

Enter new user password (4 to 12 digits) and press [\*].

 - Placing the Card or Key Tag on the Card Reader (from the outside)
- Confirming Card or Key Tag Registration (from the outside)



Place the card or key tag to be registered on the card reader of the outer body. You will know the card or key tag has been registered when "DING DONG DENG" sounds.

Place the registered card or key tag to the card reader on the outer body.


※ User password is only for the user, so other functions such as registering cards are not available with this password.

※ One ID has only one password or card.

## Deleting Registered Fingerprints & Cards

 You can delete individual or all registered fingerprints and cards.

- Pressing the [Register] Button (from the inside)
- Entering the Current Password (from the outside)




Press the [Registration] button for 3 seconds.

Enter the current password when the number pad is lit, and press [\*] button.

### [Deleting Fingerprints]

- Reading the Fingerprint to Be Deleted
- Exiting Fingerprint Deletion Mode

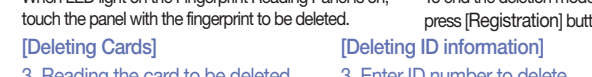

When LED light on the Fingerprint Reading Panel is on, touch the panel with the fingerprint to be deleted.

To end the deletion mode, press [Registration] button.

### [Deleting Cards]

- Reading the card to be deleted
- Deleting ID information




If you want to delete all fingerprints press [7]+[\*] after step 2. If you want to delete all cards data, press [8]+[\*] after step 2.

Enter 2 digits ID number, then the card or user password of it will be deleted.

## Multi-level Security Code Entry Mode Setting

You can set the security mode suitable for your use when you open the door using a password.

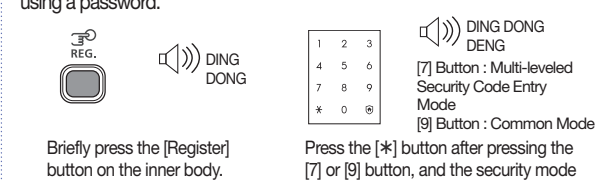


Briefly press the [Register] button on the inner body.

Press the [\*] button after pressing the [7] or [9] button, and the security mode will be set.

## Double Authorization Mode Setting


The Double Authorization mode is an enhanced security function with two factor authentication in which both password and fingerprint are required when opening the door. To set up the Double Authorization mode, at least one fingerprint has to have already been registered.

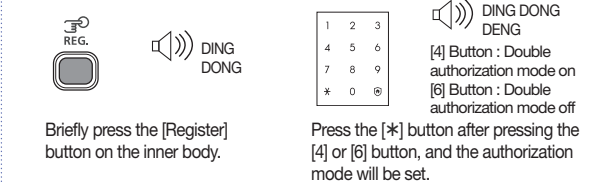

Briefly press the [Register] button on the inner body.

Press the [\*] button after pressing the [4] or [6] button, and the authorization mode will be set.

## Two-factor Authentication Mode Operation

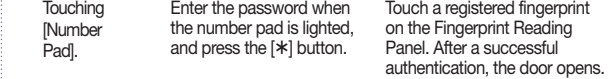

Touching [Number Pad].


Enter the password when the number pad is lit, and press the [\*] button.

Touch a registered fingerprint on the Fingerprint Reading Panel. After a successful authentication, the door opens.

## Setting the Security Function

 This is a function to prevent any intrusion while you are out. Should the door be opened from the inside while the intrusion prevention function is on, the emergency alert light will flash and the alarm will make "beep beep beep" sound.

- Setting the Security Function
- Releasing the Security Function



- When the door is closed [7] of the outside body's number pad will light up.
- Press and hold the [7] button on the outer body for 3 seconds while the door is locked.

After touching the Number Pad, have a registered fingerprint read, or contact a registered card, or enter the password and then press the [\*] button.


## Menu Table

 Function	Setting
Initialization	55 → 4560852580
Registration	<ul style="list-style-type: none"> <li>Changing password: New Password</li> <li>Fingerprint: Fingerprint</li> <li>Direct registration of Card or key tag: CARD</li> <li>Card or user password with ID number (01-30): ID Number → CARD</li> </ul>
Deletion	<ul style="list-style-type: none"> <li>3S → Password</li> <li>Fingerprint: Fingerprint</li> <li>Card or key tag: CARD</li> <li>Use index number: ID Number</li> <li>All fingerprint: 77</li> <li>All user password/card: 88</li> </ul>
Other function	<ul style="list-style-type: none"> <li>Welcome function: 1 ON, 2 No Alarm ON, 3 OFF</li> <li>Auto fingerprint: 5 ON, 8 OFF</li> <li>Double Authorization: 4 ON, 6 OFF</li> <li>Multi-level: 7 ON, 9 OFF</li> <li>Lock time: 5 → 1-9</li> </ul>

## Opening the Door from Outside with a Password

When purchased, the product is set to Multi-level Security Code Entry Mode initially. Please refer to "Multi-level Security Code Entry Mode setting" for Common Mode setting.

※ **Silent Mode**  
Before entering the password, press the [\*] button and enter the password, then both the sound of the key entering and the door opening will be suspended. It is a useful function if you do not want to disturb neighbors when you go in and out at night.



Touching [Number Pad]. When two arbitrary buttons in order. When the numbers on the number pad are lit, enter the password and press the [\*] button.

- If the security mode is changed as 'common mode', second step will be skipped.


Note

- Password must be entered after the light is on, and if does not, touch [Number Pad] and re-enter.
- To cancel, press [7] button and beep warning alarm will sound 20 times and the system will shut-down for about 3 minutes. When malfunction happens, "beep" will sound every 10 seconds, and stop mode will be turned off automatically after 3 minutes with multiple "beeps".

## Opening the Door from the Outside with a Fingerprint

 Open the door from the outside using the fingerprint authentication system. Touch the sensor properly with the fingerprint part of your finger which has been registered.

- Pressing [Open Fingerprint Cover] Button
- Reading Fingerprint



Press the [Open Fingerprint Cover] button and the lid of the Fingerprint Reading Panel opens.

Touch the Fingerprint Reading Panel with the registered fingerprint after LED light turns on, the lid of the panel closes in approximately a second later. Then push the door handle to open the door.

## Opening the Door from Outside with a Card or Key Tag

The door can be opened from outside using a card or key tag. Place the registered card or key tag on the card reader.

Placing the Card or Key Tag on the Card Reader



Place the card or key tag on the card reader. The door will be opened after 1 second.

## Opening the Door from the Inside

Opening by Pulling the Inner Handle



Please be careful not to trap your hand during use.

## Closing the Door from the Inside

Automatic Locking Setting: The door is automatically locked 1 seconds after the door is closed.

Manual Locking Setting: The door is locked when the [Close] button is pressed.

Note

- To check if the door is locked from the inside, press the security button briefly; the red LED will flash if the door is locked and the blue LED will blink if the door is unlocked.

## Initialization (Password, Card, Key Tag)

All registered data (password, card, key tag) are deleted. After initialization, the password is set to "1234", and the registered card, key tag data are erased. Please register a new password after initialization.

- Pressing the [Register] Button (from the inside)
- Entering the Numbers for Initialization (from the outside)



Press and hold the [Register] button for 5 seconds.

When the number pad is lit, enter "4560852580" and then press the [\*] button.

## Password Change

The password can be 4-12 digits number. Only one password can be registered.

- Pressing the [Register] Button (from the inside)
- Entering the Current Password (from the outside)



Press the [Register] button briefly.

Enter the current password when the number pad is lit, and press the [\*] button.

- Entering a New Password (from the outside)
- Checking New Password Operation (from the outside)



Enter the new password (4 to 12 digits) and press the [\*] button.

## Security Assurance Mode Activation/Deactivation

At-home security mode is to prevent opening of the door from outside while someone is inside.

Security Assurance Mode Activation: DING DONG DENG

Security Assurance Mode Deactivation: DING DONG DENG DONG

While the door is locked, press [Security Assurance] button on the inner body part for 3 seconds.

Pull the inner body handle to open the door, and it will deactivate.

Security Assurance Mode Operation: Rapid beeping

Inside: Press the [Security Assurance] button, then the sound for action-unavailable will be heard.

Outside: Press the [Number Pad] or touch with a card, then the sound for action-unavailable will be heard.

Warning

- When the security assurance function is activated, the door cannot be unlocked from the outside, so please be careful. Be especially careful not to allow children to set this mode accidentally from the inside.

## Sound Setting and Releasing

The sound that is generated when the number buttons are pressed, when the door is locked or when the locked door is unlocked, can be set according to the user's preference. The product is set to generate all sounds at the factory.



[0] : Mute [1] : Normal [2] : Loud

## Door Lock Time Setup Function

This function sets the time interval between the moment the door open/closed sensor recognizes the door as closed and the moment deadbolt locks the door. It can be prevented the deadbolt jam problem by adjusting the time.



Press [Registration] button briefly.

Put the [Sound Control] switch on one of [0], [1], or [2], and close the battery cover.

Default: 1 second [5]: 1 second [59]: 9 second

Press [5] - [59] button, and then press [\*] button.

To make sure the password has been properly registered, check the new password and close the door.

## Welcome Function On/Off

The welcome function is a convenient function that automatically activates the authorization standby mode when a user approaches the door, even before touching the number pad.



Open the battery cover and press [Registration] button briefly.

[5]+[\*] : Set up fingerprint Authentication standby mode [8]+[\*] : Clear Fingerprint Authentication standby mode

### On and Off / Function Description

- Welcome function: The mode will automatically activate the authorization standby mode when a user approaches the door lock.

- One-minute alarm: When someone remains in front of the door lock for more than a minute, this mode will sound the tamper prevention alarm.

Caution

- The factory defaults are set with the welcome function on and the alarm function off.
- The working distance of the infrared sensor can differ depending on light conditions and other environments. When the front door is exposed to sun light or constant bright lights it is advised to limit the usage of the sensor as it might sound the alarm.

## Intrusion Detection Function

This function generates the alarm sound when an attempt is made to forcefully open the door from the inside or the outside.

(This is a basic function of the lock, and cannot be separately set or released.) If the door is forcefully opened while locked, the door opening sensor detects it and generates the alarm sound.

## Automatic/Manual Locking Setting

The Automatic Locking mode allows for automatic locking of the door when it is closed.

Open the battery cover on the inner body.

Set the [Automatic/Manual Locking] toggle switch of the Inner Body to the 'A/M' position.

- Automatic: The door is automatically locked 1 seconds after being closed.

- Manual: The door does not lock automatically, and [CLOSE] button must be pressed from the inside, touch [Number Pad] to close the door.

## Replacing the Batteries

Battery Replacement Alarm Generation

If the melody of "Blues for Elise" sounds when opening the door with the password or fingerprint or a card (key tag), it is time to replace the batteries. (The low battery indicator is lighted when the melody sounds.)

Replacing the Battery

Replace all 8 batteries within a 1 week of the first alarm sound. - The unit will stop operating suddenly if the batteries are not replaced.

Warning

- Depending on battery manufacturer, date of manufacture and the user environment, the duration of use may vary. (In the case of average use, given as 10 times a day, 8 AA alkaline 1.5V batteries can last for 12 months.)
- If the poles of the batteries are not placed properly, the lock will not operate normally.
- Liquid leaks from batteries can damage the product. Check the batteries regularly every 6 months.
- After the battery replacement alarm has sounded, password/fingerprint/card information cannot be registered, changed, deleted, initialized or configured until the batteries are replaced.

## Using the Emergency Battery

If the batteries are not replaced after their replacement time comes, they will be completely discharged and the lock will not operate.

Opening the Door Using an Emergency Battery

Purchase an emergency battery (9V) at the nearest store.

- As the alkaline batteries offer longer life, they are recommended over the manganese batteries or rechargeable ones.



While connecting a 9V battery to the contact point, it is available to use fingerprint, card and password.

## Alarm Sound (Prank Prevention Function)

This function generates an alarm sound and deactivates lock operation when it is improperly handled from the outside.

This alarm will sound if an attempt is made to open the door with an invalid card, or if a wrong password is entered five times in a row. The alarm sound is generated, and the lock is deactivated for 3 minutes. While the door is in this inactive mode, a single "DING" sound is generated every 10 seconds and seven consecutive "DINGS" will sound after 3 minutes. Following this, the lock is released from inactive mode.)

Releasing the Alarm

Inside: Press the [Register] button.

Outside: Get a registered fingerprint or a registered card authorized or enter the password and then press the [\*] button.

## Built-in Fire Detection Function

This function generates the alarm sound when fire is detected so that the residence can quickly respond. The built-in fire detection function is a basic function of the



# SHS-P718

## USER MANUAL

### Samsung SDS Digital Door Lock

- 便利的开门方式
- 便捷的Push Pull开门方式
- 迎宾功能
- 用户接近门锁时自动转为工作状态
- 礼仪功能
- 输入时可转为静音状态
- 房卡自动识别功能
- 房卡接触实现自动识别, 简单方便
- 双重认证功能
- 指纹、密码双重认证
- 室内安心功能
- 用户居家时, 将切断外部识别功能
- 火灾感应功能
- 内装火灾感应器
- 防盗功能
- 外出时启动防盗功能



配件名称	有毒有害物质或元素					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
金属配件	○	○	○	○	○	○
印刷电路板组件 (Printed Board Assembly)	X	○	○	○	○	○
电缆 (Cable)	○	○	○	○	○	○
塑料配件 (Plastic)	○	○	○	○	○	○
电池	○	○	○	○	○	○

○：配件中有害物质含量不超过<含量限制标准GB/T 26572>所规定的标准值  
 X：配件中有害物质含量超过<含量限制标准GB/T 26572>所规定的标准值  
 上述表明本产品所含的有害物质含量信息，配件别有害物质信息是根据合作公司所提供的信息和内部鉴定结果来制成的。部分配件所含的有害物质，按照现在的技术水平是很难代替，为了代替这个问题三星SDS(三星数据系统)会竭尽全力去努力的。

www.samsungsds-nss.com/en

GC88-02025A ED.05

## 安全注意事项

**Warning** 为保证用户安全, 避免给用户带来财产损失及使用不便, 请务必仔细阅读以下内容后正确使用本产品。


- 禁止用户任意安装或修理本产品。
- 禁止用力下坠或用力拉本产品。
- 安装时, 门与门框之间的间距不能超过5mm。
- 请按照电池正负极 (+/-), 正确安装电池。
- 请小心管理密码, 并定期更换密码, 以免他人知道。
- 请按照电池正负极 (+/-), 正确安装电池。
- 禁止用湿手操作本产品, 防止水、饮料等液体进入锁体内部。
- 请让用柔软的布清洁锁体, 禁止使用水、茶、酒精擦拭本产品。
- 禁止过度用力或用尖锐的器具按电子锁的按键。
- 产生电池更换报警音后, 请务必在一周之内及时更换新电池。
- 外出时请务必确认门是否完全上锁。

※ 为保证使用安全, 请务必在使用前仔细阅读“安全注意事项”。

※ 本公司保留改进产品权利, 产品性能及说明如有变更, 恕不另行通知。


## 使用前须知

因安装的环境不同, 产品零部件会有差异。

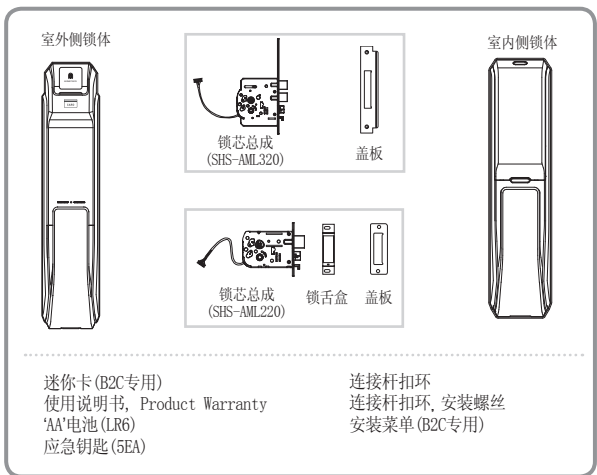


迷你卡 (B2C专用) 使用说明书, Product Warranty 'AA'电池 (LR6) 应急钥匙 (SEA)

## 室外锁体名称

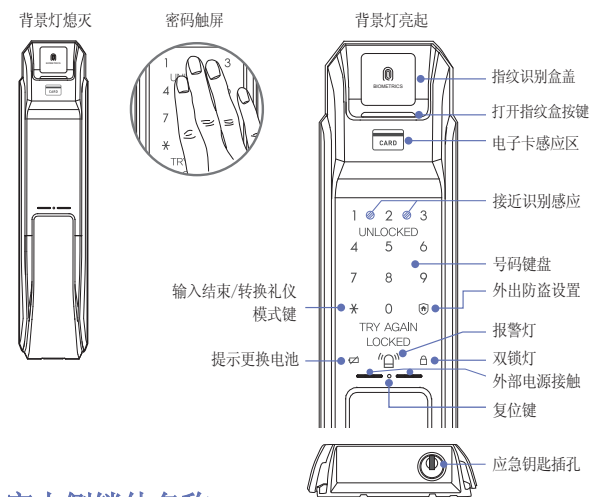

## 室内侧锁体名称

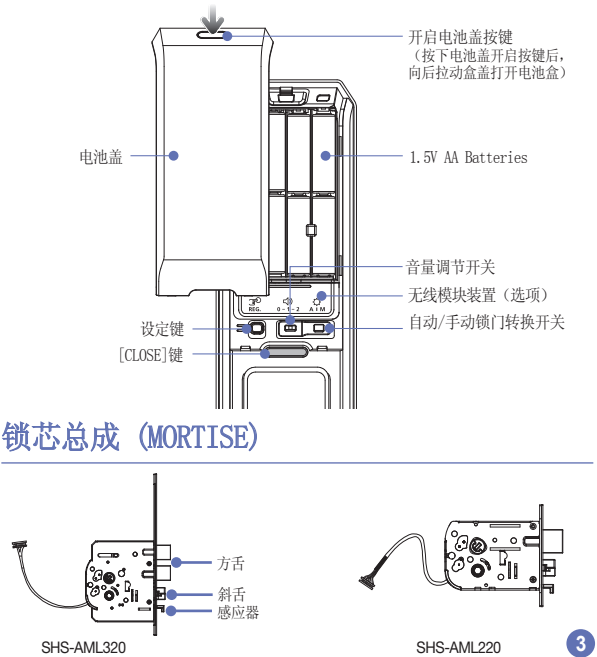

## 锁芯总成 (MORTISE)



**Warning** 注意管理密码, 别泄漏给他人, 一组密码不宜使用过长时间。

## 指纹、注册卡、Key Tag

最多可登记、使用100个指纹。  
 可注册的密码和卡数量达到30个


- 按[设定]键 (从室内)
- 输入密码 (从室外)



指示灯亮时用将要登记的指纹接触指纹识别器。听到“叮”的声音, 待指示灯灭后收回手指。(反复识别三次)



指示灯亮时将将要登记的指纹接触指纹识别器。听到“叮”的声音, 待指示灯灭后收回手指。(反复识别三次)

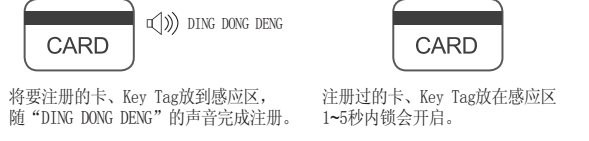

将要注册的卡、Key Tag放到感应区, 随“DING DONG DENG”的声音完成注册。

**Warning** 想注册多张开门卡时, 注册好第一张卡后在20秒内一次将剩余的卡放到感应区, 如操作过程中间隔20秒以上会自动终止。  
 登入用ID 号码为随机号码。


## 通过ID号码进行卡和密码的注册

- 输入 2位数的ID号码
- 输入新用户密码
- 输入01~30以内的ID号码按下[\*]键。
- 输入(4~12位数)的密码按下[\*]键。

将要注册的卡、Key Tag放到感应区, 随“DING DONG DENG”的声音完成注册。

## 删除指纹 & 门卡

- 按[设定]键 (从室内)
- 输入密码 (从室外)
- 识别将要删除的指纹
- 结束指纹删除

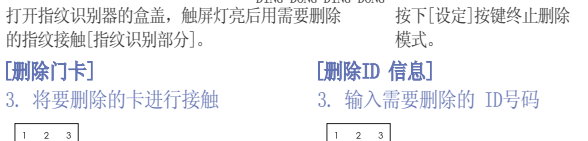


将要删除的卡进行接触

**Warning** 需要删除所有指纹时, 完成第2阶段操作后按下[77]+[\*]。需要删除所有卡时, ID号码。完成第2阶段操作后按下[88]+[\*]。



## 设定双重安全模式

使用密码开门时, 可根据适用性设定认证模式。

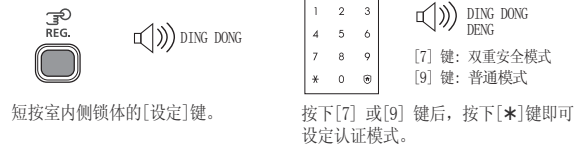


## 设定双重认证模式

双重认证模式指开门时须经过输入密码、认证指纹后方可开启房门门的强化保安功能。设置双重认证模式时, 至少需要一个以上已经登记过的指纹。

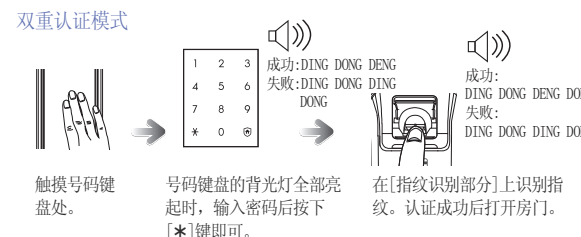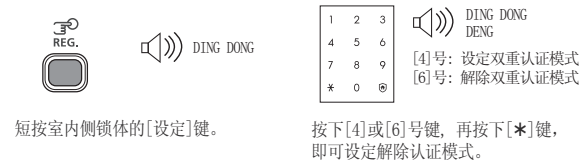

## 设定防盗功能

在用户外出时防止外部入侵的功能, 室内设置后, 意外情况发生时鸣笛报警。在设置防盗功能的情况下, 如房门从内部被打开, 警报灯将闪烁, 同时持续5分钟鸣笛报警。

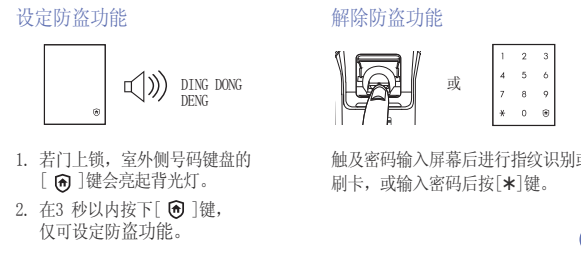


## Menu Table

初始化	设定	删除	其他功能
SS → 4560852580	密码变更: New Password	SS → Password	欢迎模式: 1 ON
指纹	指纹: Fingerprint	指纹	2 No Alarm ON
卡/门卡禁入	卡/门卡禁入: CARD	卡/门卡禁入	3 OFF
使用ID号码标记的卡/密码登入	使用ID号码标记的卡/密码登入: ID Number	使用ID号码标记的卡/密码登入	4 ON
		删除所有指纹	5 ON
		删除所有密码	6 OFF
			7 ON
			8 OFF
			9 OFF
			设定自动关门时间: 1-9

## 从室外开门(密码)

初始设置为双重安全模式, 如果想设置为一般模式的话, 请参考普通模式设定方法

※ 礼仪模式  
 输入密码前, 先按[\*]键在输入密码, 门锁将不发出“插入钥匙”, “已开门”等提示音。  
 夜间出入静音功能。

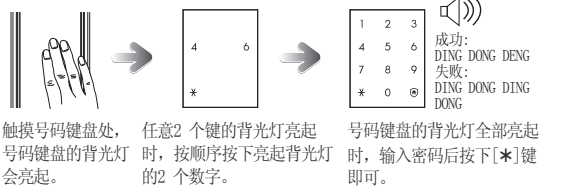

触摸号码键盘处, 任意2个键的背光灯亮起时, 按顺序按下亮起背光灯的2个数字。号码键盘的背光灯全部亮起时, 输入密码后按下[\*]键即可。

**Note** 应在号码键盘背光灯亮起时输入密码: 背光灯熄灭时, 请触摸号码键盘处, 背光灯亮起时重新输入。  
 若输入密码错误须取消时, 应按一下[⊙]键再重新输入。  
 连续5次输错密码时, 锁体会发出20次“Beep”的提示音, 同时电子锁会自动停止工作3分钟。电子锁在停止工作状态下, 每隔10秒钟发出“beep”的声音。3分钟之后电子锁会发出“哔哔哔哔哔哔”的声音并自动恢复工作。


## 室外指纹开锁

在室外利用指纹打开房门。用已经登记过指纹的手指准确地接触指纹识别部分。

- 打开指纹盒]按键
- 识别指纹

## 从室外开门(电子卡、迷你卡)

从室外使用电子卡或迷你卡即可开门。请将已设定的电子卡、迷你卡正确地置于电子卡感应区。

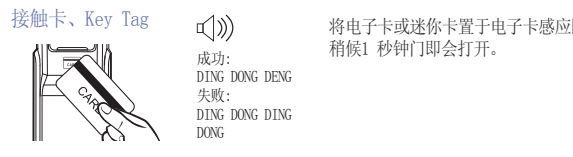

## 从室内开门




设定自动锁门 关门1秒后自动上锁。  
 设定手动锁门 按[ CLOSE ]键进行锁门。


**Note** 如果想在室内检查锁门状态, 轻按放心按钮, 如果门已上锁, 亮红灯提示, 如门未上锁, 亮蓝灯提示。

## 初始化方法 (密码、电子卡、迷你卡)

- 按[设定]键(从室内)
- 输入初始号码(从室外)
- 输入新密码(从室外)
- 再次输入新密码(从室外)

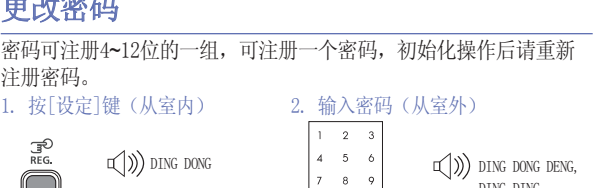


短暂的按下设定按钮。按键板亮灯后输入密码按下[\*]键。

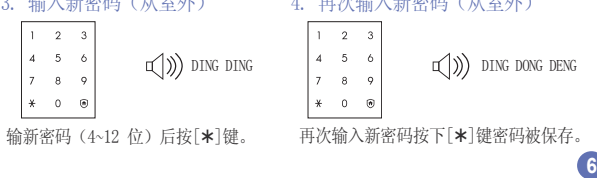

## 室内安心模式设定/取消


室内安心模式, 户主在家时防止他人从外部开启房门时使用。

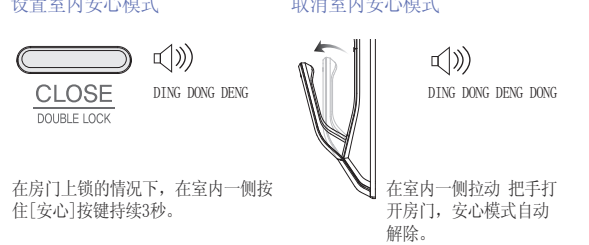

在房门上锁的情况下, 在室内一侧按[安心]按键持续3秒。  
 在室内一侧拉动把手打开房门, 安心模式自动解除。

**Warning** 室内安心模式下, 房门无法从室外打开, 请小心使用。应特别注意请勿让儿童在室内设置此模式。

## 设定及解除声音模式

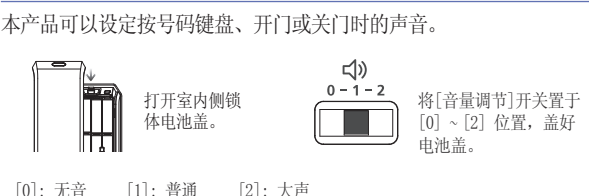


## 设置关门时间功能

门敞开时, 设置门栓上锁时间的功能。当门徐徐关上时, 门栓易被卡住, 设置门栓弹出时间将可能改善上述不便现象。自动上锁时间可以调整。



## 迎宾功能设定/解除


迎宾功能指在用户接近门锁时, 即使未接触到密码触屏, 门锁也会自动转入工作认证形态的一种便利功能。

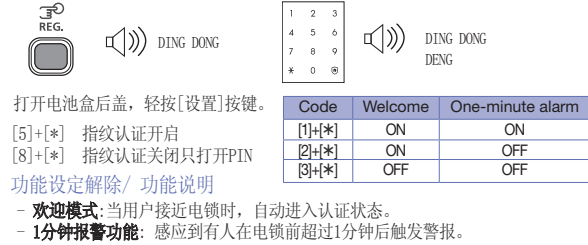

**Warning** 出厂设置为迎宾模式, 警报功能解除。  
 红外线传感器在阳光紫外线作用下可能导致距离功能发生改变。曙光走廊内部及使用长灯照明情况容易诱导警报发生, 切勿使用。

## 入侵感知功能

在室内或室外, 强制打开门时发出报警音的功能。(此功能为产品基本功能, 不可设定/删除。)

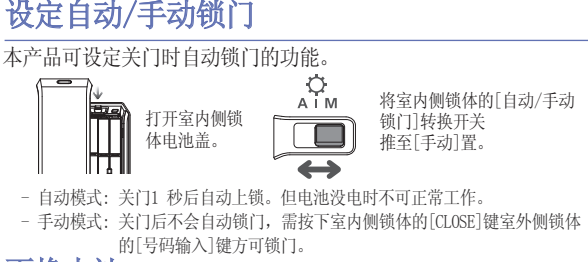

本产品可设定关门时自动锁门的功。  
 将音量调节]开关置于[0]~[2]位置, 盖好电池盖。

**Warning** 电池因生产厂家、生产日期、使用环境不同, 使用时间存在差异。(AA型号1.5福电池只, 按每日开门10次标准计算, 可使用12个月)  
 更换电池的警告音响后, 不更换电池继续使用时, 可能会产生电子锁突然停止工作的情况。  
 电池液体泄漏时会损坏锁体, 请务必定期(约6个月间隔)进行确认。  
 更换电池的提示音响后, 在更换新电池之前, 无法执行密码/感应钥匙信息的设定、更改、初始化和功能设定等。

## 应急电池的使用方法

到了电池更换日期不更换继续使用时, 电池会导电导致门锁不能正常工作。



发出报警音时 (防恶作剧功能)

在室外操作电子锁不正确时, 电子锁有发出报警音并自动进入断电模式。

使用未设定的卡或密码输入错误超过5次时(电子锁会发出报警音并会自动停止工作3分钟。电子锁在停止工作状态下, 每隔10秒钟发出“DING”的声音。3分钟之后电子锁会发出“DINGS”的声音并自动恢复工作。)  
 警报音的解除方法  
 从室内 按下室内侧锁体的[ CLOSE ]键或[ 设定 ]键, 或者把手向下拉即可解除。  
 从室外 在识别已经登记的指纹、刷卡、输入密码后按[\*]键。

## 火灾感知功能

发生火灾时电子锁会发出警报, 告知住户赶快躲避的功能。(火灾探测功能为基本设定的功能, 用户不可随意解除。)  
 温度升至75°C±10°C时自动开启火灾报警功能, 根据环境设置不同可能略有差异。  
 火灾发生时, 温度探测器会感知, 然后[ CLOSE ]键不停闪烁, 同时电子锁发出报警音。报警音结束后门会自动打开。(室内温度下降到一定程度后, 电子锁会恢复正常工作。)  
 火灾感知功能在室内温度达到60°C左右时启动, 安装环境不同会有差异。

## 产品规格

项目	规格
正常电源	AA型1.5 V 碱性电池 (LR6) 8 节 (6 V)
应急电源	9 V 电池 (6LP22) 1 节 (单独购买)
工作方式	电子控制方式 (输入密码或电子卡、迷你卡、指纹)
重量	3.9 kg (包括室内侧和室外侧)
产品大小	室外侧 (包含把手)
	85mm (W) × 387mm (H) × 61mm (D)
室内侧 (包含把手)	86mm (W) × 354.8mm (H) × 63 mm (D)

● 为提高产品的功能, 生产商不可不经过用户的同意对使用说明书的内容作出更改。